

**WASHTECH**

**UD**

**Operator Manual**



**WASHTECH**<sup>®</sup>  
PROFESSIONAL WASH SYSTEMS



**WARNING**

Before installation and commissioning, you must read the safety instructions and warnings carefully and all the warning labels attached to the equipment.



**IMPORTANT**

Failure to comply (even partially) with the instructions given in this manual will invalidate the product warranty and relieves the manufacturer of any responsibility



**IMPORTANT**

The alteration of machine operation, design or the replacement of parts not approved by the manufacturer may void warranties and approvals.



**IMPORTANT**

This machine is intended for commercial use only.

**CONTENTS**

Safety Instructions.....	3
Installation.....	4
Installation Diagram.....	5
Operating Procedures.....	6
Troubleshooting.....	9
Wiring Diagram.....	10

We have checked that the contents of this document correspond to the model described. There may be discrepancies nevertheless, and no guarantee can be given that they are completely identical. The information contained in this document is reviewed regularly and any necessary changes will be included in the next edition. We welcome suggestions for improvement.

Specifications and document subject to change without prior notice.

Information supplied in this manual is copyright. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical without the express permission of the author / publisher.

**Service 1 800 622 216**

**Parts 1 800 337 963**



Distributed in Australia by Moffat Pty Limited  
740 Springvale Road, Mulgrave, Victoria  
Tel 09 9518 3888 | Fax 03 9518 3818

# Safety Instructions



## **WARNING**

Equipment contains dangerous voltages and can be hazardous if installed or operated incorrectly. Non-compliance with warnings or failure to follow the instructions contained in this manual can result in loss of life, severe personal injury or serious damage to property.

## **Installation**

- Use qualified, skilled personnel
- Follow installation instructions
- Connect to correct voltage and supply current
- Provide fully accessible electrical Isolation Switch & water supply valves

## **Training and Supervision**

- Read and understand the Operating instructions and train all staff
- This appliance must not be operated by children or infirm persons
- Machine panels must only be removed by suitably qualified and trained personnel – internal hazards include live electrics and very hot surfaces
- This appliance is not intended for use as a stepladder

## **Hot Surfaces**

- Some surfaces may be hot or very hot

## **Chemicals**

- Commercial dishwashing detergents are hazardous – handle with care
- Read and follow the safety information found on the labels of detergent containers and Material Safety Data Sheets
- Use protective eyewear and clothing if decanting containers

## **Hot Water**

- Do not put hands in wash water which may be over 60°C and contain hazardous caustic detergent
- Rinse water can be over 90°C
- Door safety switches are designed for emergency use only

## **Cleaning**

- Do not hose down the machine or splash water over the exterior
- Watch for broken glass etc when cleaning the inside of the machine

## **Service/repair**

- Under no circumstances the user should attempt to carry out repairs
- All service/repair work must be carried out by qualified personnel only

## **Power Cord Replacement**

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard

# Installation Checklist



## WARNING

Installer must be suitably qualified and ensure compliance with all codes and standards including AS/NZS3500.1.

## Unpack

- Unpack the machine, check for damage and complete delivery.

## Positioning

- Place machine on sound waterproof self draining floor and adjust feet to level
- Allow room for adjacent chemical containers

## Water

- Flush supply lines before connection
- Connect hose supplied to adjacent accessible isolator valve - 20 mm 3/4 male
- Flow rate required - 20 litres per minute
- Temperature - 65°C
- Consumption per cycle - 2.6 litres
- Pressure required - 200-350 kPa - fit limiter above this pressure
- Back Flow - Atmospheric Vacuum Breaker
- Potable water quality is required - filter or soften if necessary

## Water Quality Requirements

Hardness	ppm	pH
min	20	7
max	100	8

Ions	Cl <sup>-</sup>	SO <sub>4</sub>	Fe	Mn	Cu	Cl <sub>2</sub>
Max mg/L	100	400	0.1	0.5	0.05	0.1

## Power

- Machine shipped with cordset for 15 A 240V 50Hz via adjacent switched outlet.

## Waste

- Connect drain pump hose supplied to vented upstand or sink waste connection

## Detergent

- Insert hose into container of commercial dishwasher low foam detergent
- Adjust detergent dosing and prime detergent using the keypad (refer to page 7)
- Use good quality chemicals and regularly check containers

## Rinse Fluid

- Insert hose into container of commercial dishwasher rinse fluid
- Adjust rinse fluid dosing and prime rinse aid using the keypad (refer to page 7)
- Use good quality chemicals and regularly check containers

## Operation


- Run several cycles, ensure that operator has read and understands instructions

## Troubleshooting Installation


- If machine doesn't fill after switching on power, check & ensure that hot water supply tap is open and water supply pressure is not below specification.

# UD Installation Diagram

UD INST 25-02-16 3 E

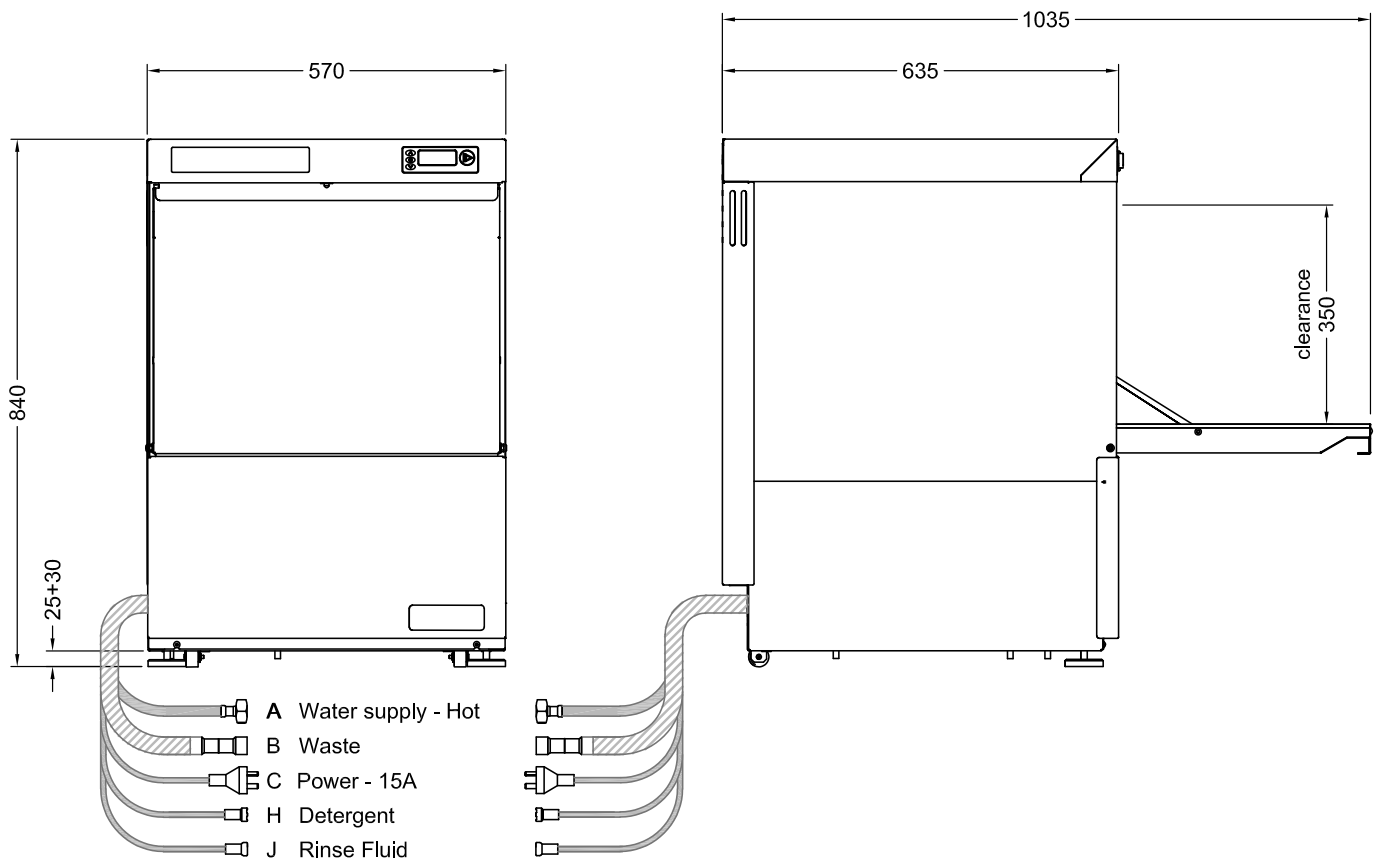

# UD Operating Instructions

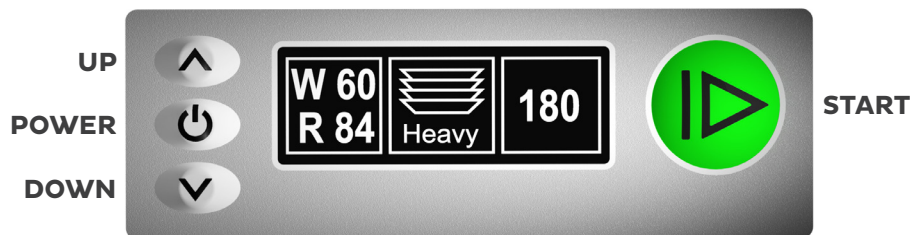

## START

- Turn on at wall
- Ensure the Scrap tray (3) is in place
- Ensure the Upstand (1) and Drain filter (2) is in place and shut door
- Press Power button for 3 seconds to turn machine on and begin the fill cycle

## OPERATION

- Select cycle using Up/Down buttons (use the Heavy cycle whenever possible)
- Press Start button (once this is Green or Orange) to begin washing
- Timer counts down to 00 then resets after door is opened

## START BUTTON COLOURS

- |  |                             |
|--|-----------------------------|
| White = machine is filling               | Purple = door is open       |
| Red = cycle is running                   | Orange = machine is heating |
| Green = rinse water is up to temperature | Blue = power saving mode    |

NOTE: The machine may be started while Orange light is on and while rinse water is being heated and the timer will pause at 22 seconds until rinse water is up to 83 degrees


## SHUT DOWN – EVERY NIGHT

- Select Drain cycle via Up or Down buttons
- Remove drain Upstand (2) and shut door
- When Drain cycle is finished after 100 seconds, remove and rinse Upstand (1), Drain filter (2) and Scrap tray (3) before replacing back in machine along with Upstand (2)

## CLEANING – AT LEAST ONCE A WEEK

- Remove, rinse and replace:

Upstand	1
Drain Filter	2
Scrap Tray	3
Thumbscrew	4
Wash Arm	5
Rinse arm	6
- Inspect and clear all jets in the wash and rinse arms

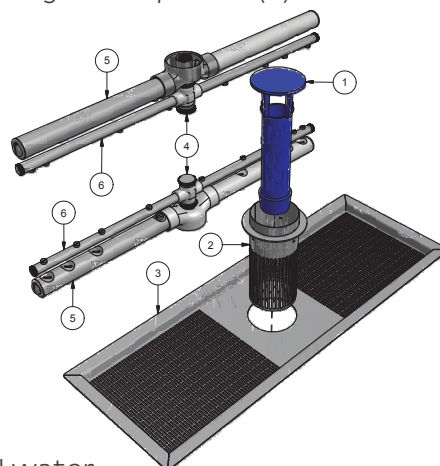

## SUGGESTED BEST PRACTICE

- Pre-rinse Scrape and/or rinse plates and glasses in cool water
- Chemical Use good quality non foaming commercial detergent and drying agent  
Do not use domestic detergent which will cause the machine to foam

# User Programming

The **User Settings** menu is accessed by pressing the UP and DOWN keys simultaneously for 5 seconds, the screen should then change to:



Press the POWER button to scroll between settings.  
Press the UP and DOWN keys to change a specific setting,  
Press the START button to return to the operator screen.

The programming options are specified in the table below:

User Settings	Factory Setting	Selection
Power Save	ON	ON/OFF
Detergent Prime	OFF	ON/OFF
F-Detergent Injection Time	40	0 - 180 secs
W-Detergent Injection Time	15	1 - 30
Rinse Aid Prime	OFF	ON/OFF
W-Rinse Aid Time	12	1 - 30
Display Contrast	27	10 - 40

**Power Save** function reduces the rinse temperature setting by 10°C when the machine is idle for 5 minutes or more. The temperature settings return to the set value when door is opened or START/STOP key is pressed.

**Detergent Prime** function allows manual operation of the detergent pump to fill the detergent hose with chemicals. Press UP key to switch the detergent pump on, DOWN key to switch the pump off. If the detergent pump is turned on and left running, it will stop automatically after 1 minute of operation.

**F-Detergent Time** controls the operation time of the detergent pump during the fill of the wash tank. The factory settings for passthrough models – 80 seconds.

**W-Detergent Time** sets the injection time of the detergent pump at the beginning of each wash cycle. Ex-factory setting is 15 seconds as board default.

**Rinse Aid Prime** function allows manual operation of the rinse aid pump to fill the rinse aid hose with chemicals. Press UP key to switch the rinse aid pump on, DOWN key to switch the pump off. If the rinse aid pump is turned on and left running, it will stop automatically after 1 minute of operation.

**W-Rinse Aid Time** controls the injection time of the rinse aid peristaltic pump. The rinse aid pump is set to operate at the beginning of each wash cycle. Ex-factory setting is 12 seconds as board default.

# Troubleshooting

If an error message appears on the control display first try turning the machine OFF for 30 seconds and then back ON. If the error message remains call for service.

<b>Issue</b>	<b>Resolution</b>
Error 7	Fill failure - check drain upstand is fitted & water supply is turned on and good flow rate
Error 8	Drain failure - check drain upstand is removed & drain hose is not kinked or blocked
Not filling	Check water supply is on and door is closed
Refills during Wash	Check Drain upstand is fitted
Cycle does not start	Check door is closed
Wash too long	Check water supply temperature - wash stops at 22 seconds if rinse is still heating
Foaming Wash	Excessive use of rinse fluid and/or low wash temperature can cause foaming
Poor Results	Read and carefully follow the machine installation, operating and care procedures

**All of the following is actually in the instructions on previous pages of the manual**

Pre-scrap and pre-rinse washware

Do not overload dishracks - avoid overlap of plates, wash cutlery unsorted, handles up

Use quality low foam detergent and rinse fluid - check containers and adjustment

Use heavy cycle - baked on soil requires pre-scraping and/or pre-soaking

Remove and check wash & rinse arms & jets are clean and rotating freely

If plates are not pre-rinsed wash water may need changing regularly

Check wash and rinse temperatures


Remove rack when cycle ends and leave on the bench a few minutes for drying



# UD8 (W) Wiring Diagram


030322 14/03/17 3B

## POWER SUPPLY TERMINAL

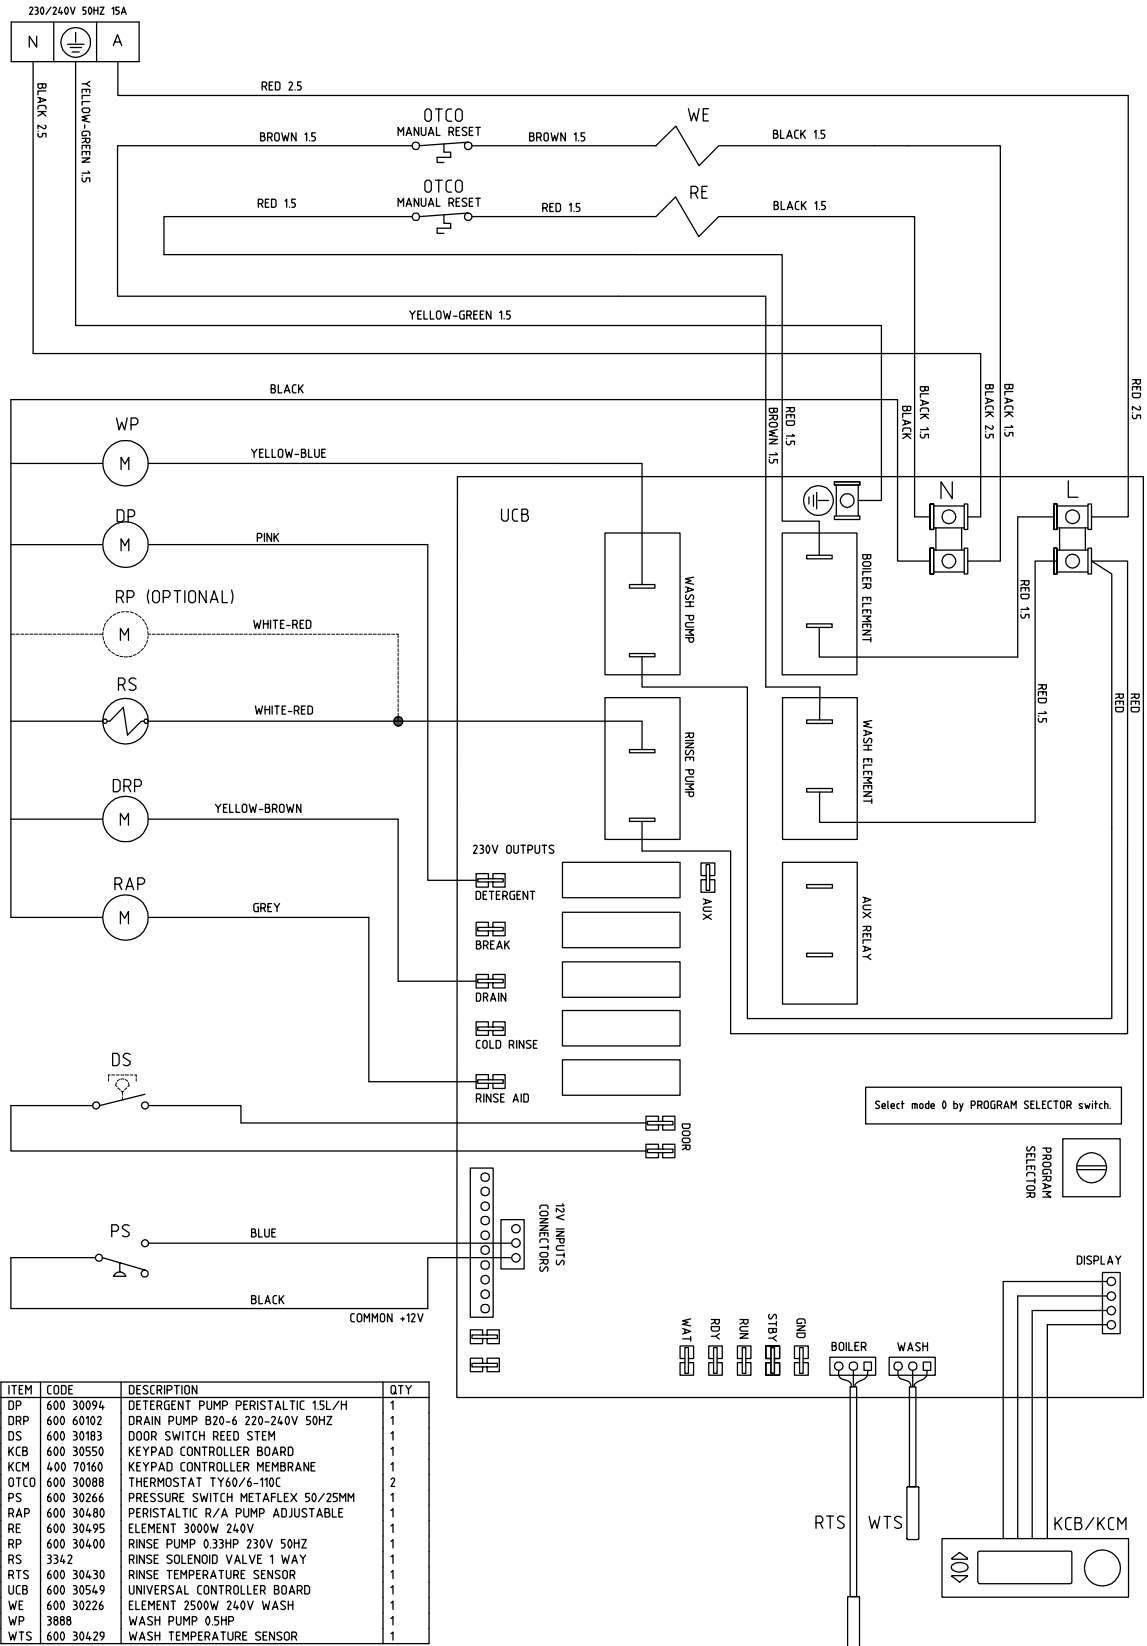


ITEM	CODE	DESCRIPTION	QTY
DP	600 30094	DETERGENT PUMP PERISTALTIC 15L/H	1
DRP	600 60102	DRAIN PUMP B20-6 220-240V 50HZ	1
DS	600 30183	DOOR SWITCH REED STEM	1
KCB	600 30550	KEYPAD CONTROLLER BOARD	1
KCM	400 70160	KEYPAD CONTROLLER MEMBRANE	1
OTCO	600 30088	THERMOSTAT TY60/6-110C	2
PS	600 30266	PRESSURE SWITCH METAFLEX 50/25MM	1
RAP	600 30480	PERISTALTIC R/A PUMP ADJUSTABLE	1
RE	600 30495	ELEMENT 3000W 240V	1
RP	600 30400	RINSE PUMP 0.33HP 230V 50HZ	1
RS	3342	RINSE SOLENOID VALVE 1 WAY	1
RTS	600 30430	RINSE TEMPERATURE SENSOR	1
UCB	600 30549	UNIVERSAL CONTROLLER BOARD	1
WE	600 30226	ELEMENT 2500W 240V WASH	1
WP	3888	WASH PUMP 0.5HP	1
WTS	600 30429	WASH TEMPERATURE SENSOR	1

# Accessories

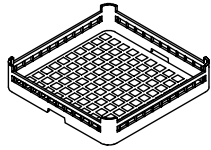


**600 70029**  
**CUPRACK CB 500mm X 75mm high**

---

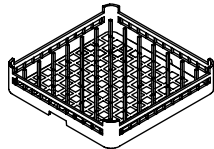


**600 70028**  
**DISHRACK P12/18 500mm 18 DISH**

 ---




**C660503**  
**CUTLERY CONTAINER G**

---

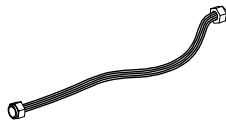


**600 60080**  
**HOSE SS 2M**

 ---




**C440201**  
**RUBBER FOOT D.60 X 10**

 ---




**ELECTRICAL WIRING DIAGRAM** ( **UNDER FRONT COVER** )

 ---




**OPERATOR MANUAL**

---

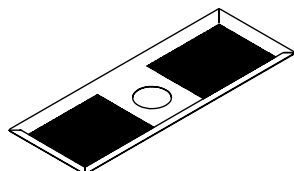

**207 20159**  
**SCRAP TRAY**  
**\*\*\*CHECK IN MACHINE\*\*\***

 ---



**207 10004**  
**FILTER ASSEMBLY**  
**\*\*\*CHECK IN MACHINE\*\*\***

# Parts

<b>Description</b>	<b>Part No.</b>
<b>Cabinet &amp; Door</b>	
Door Catch Plunger Assembly	400 10104
Door Seal Gasket (540mm)	600 90064
<b>Controls &amp; Indicators</b>	
Digital Temperature 1000mm	600 30430
Door Reed Switch	600 30183
WI200 Controller PCBA	600 40081
WI200 Keypad Membrane	400 70160
WI200 LCD Interface PCBA	600 30420
<b>Heating Components</b>	
Over Temperature Thermostat	600 30088
Rinse Element 3kW	600 30495
Wash Element 2.5kW	600 30226
<b>Hose &amp; Fittings</b>	
Hose Drain Pump 2.5m	600 60105
Pressure Switch Hose (520mm)	3067
Wash Pump Outlet Hose (75mm)	6195
Upper Wash Hose	400 90012
<b>Pumps &amp; Solenoids</b>	
Detergent Pump	600 30094
Detergent Pump Hose	600 30148
Detergent Squeeze Tube	600 30134
Drain Pump	600 60102
Rinse Aid Pump Adjustable	600 30480
Rinse Aid Squeeze Tube	600 30119
Solenoid Valve	3342
Wash Pump	3888
<b>Wash Tank Components</b>	
Drain Upstand	207 10022
Pressure Bell	400 90135
Pressure Bell O Ring	ARP 205
Rinse Arm Assembly	400 10239
Rinse Spindle	400 30339
Wash Arm Assembly	400 10241
Wash Spindle	400 30072
Wash Spindle Nut	400 30074

Information supplied in this manual is copyright.  
No part of this work may be reproduced or copied  
in any form or by any means, electronic or  
mechanical without the express permission of the  
author/publisher

Distributed in Australia by Moffat Pty Limited



740 Springvale Road  
Mulgrave 3170  
Victoria  
Australia

24HR Service 1 800 622 216  
Parts 1 800 337 963

Tel 03 9518 3888  
Fax 03 9518 3818  
E-mail [vsales@moffat.com.au](mailto:vsales@moffat.com.au)  
web [www.moffat.com.au](http://www.moffat.com.au)

#### ISO9001

All Washtech products are designed and  
manufactured by Washtech using the  
internationally recognised ISO9001 quality  
management system, covering design,  
manufacture and final inspection, ensuring  
consistent high quality at all times.

In line with policy to continually develop and  
improve its products, Washtech Ltd reserves the  
right to change specifications and design without  
prior notice.

an Ali Group Company



The Spirit of Excellence